

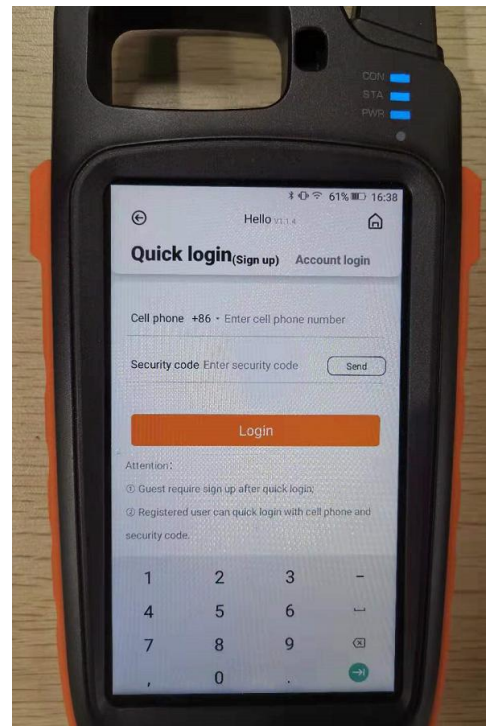




1, Turn on the machine and log in account

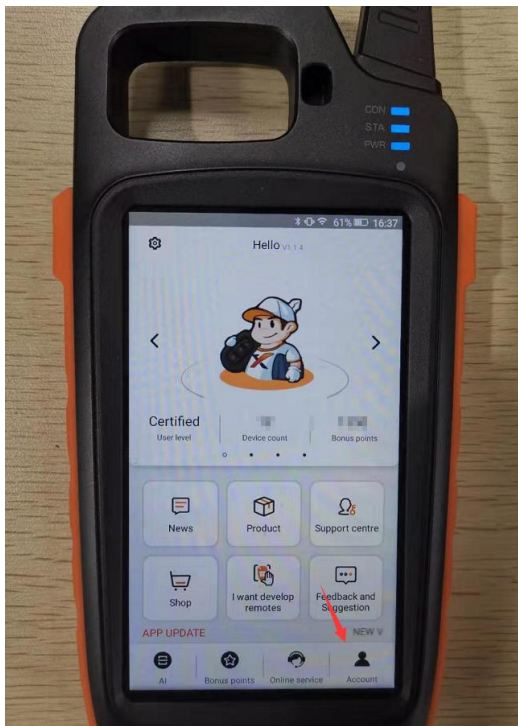

2, Turn to keytool max option and use generat 10 pcs xhorse remote and collect the points , you can touch the area of 'Bnous Points' for collect points, you can earn the points for first time to use the remote from xhorse .

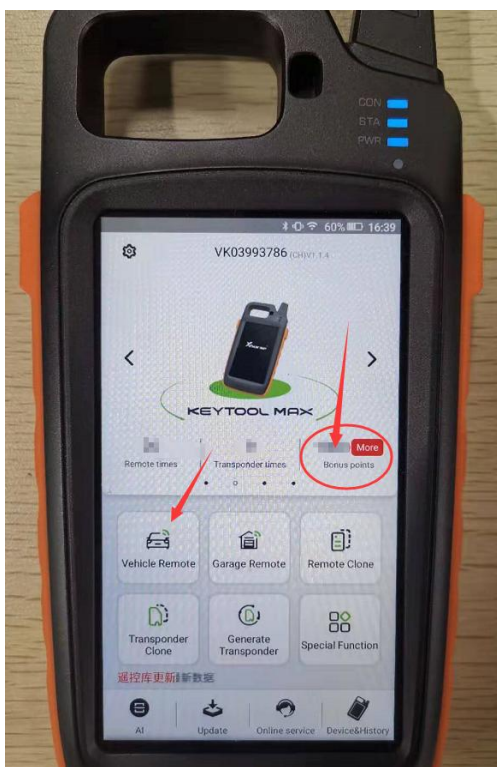

3, An hour later after collect points , the 96 bit 48 clone function will be activated ,you can check it in your keytool max machine

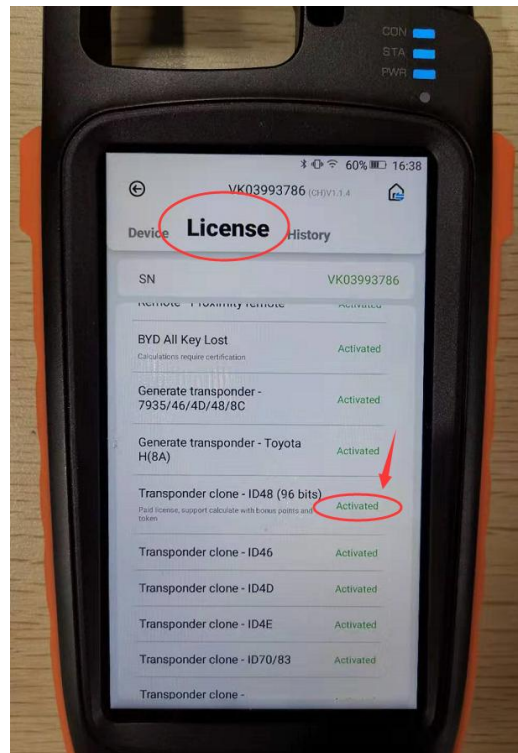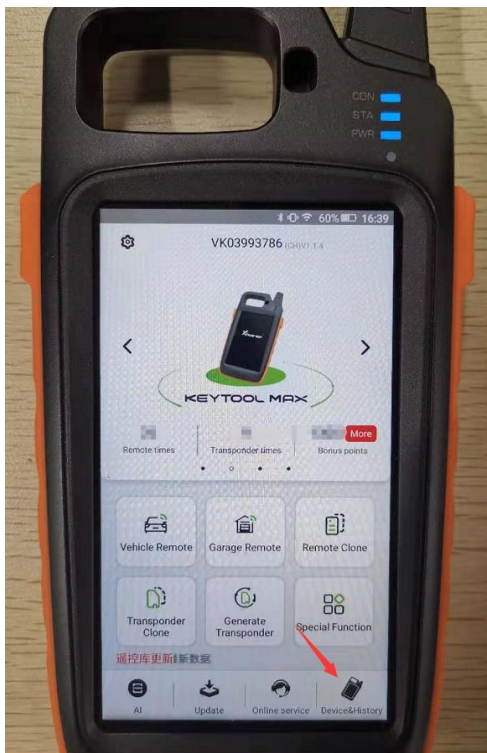

The function will activate in one hour after generate and collect the points from 10 pcs remote

Remark : xhorse has 4 kind of remote , wire remote , wireless remote , super remote , samrt key remote ,

Generate each kind of remote will be earn different value of points

Wire remote = 25 points

Wireless remote = 40 points

Super remote = 40 points

Smart key remote = 60 points